



**Smart
Home
Security**



Plug-In Floodlight Camera

Installation Manual



Installation Support:

(877) 998-1457

AAA.com/SmartHome-Install

Pre-installation checklist


- ADC-V729 camera (included)
- 24V DC 2A power supply (included)

Caution: A 24V DC adapter is different than the standard 12V adapters used for other ADC cameras.

- Mounting hardware (included)
- Broadband (Cable, DSL, or Fiber Optic) internet connection with router

Note: If the router does not have the WPS button, you will need the case-sensitive SSID (wireless network name) and the network WPA or WEP key (if the encryption is enabled at the router).

- Wi-Fi enabled computer or mobile device

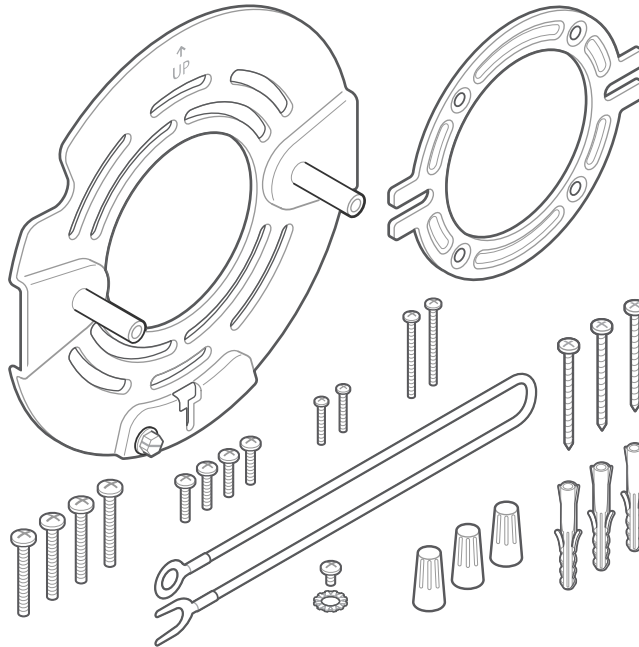

In the box

- ADC-V729 camera
- 1 set (x2) of M4 7/16 screws to attach the floodlight base to the mounting bracket
- 1 set (x2) of weatherproof caps to seal the unit after install

Screw bags

Multiple screw sizes are included to accommodate multiple junction box and screw hole sizes. Choose which set to use based on your particular install requirements. The following screws are included for mounting:

- (4) #8-32 X 7/8" – for attaching the mounting bracket to the wall/junction box
- (4) #8-32 X 1/2" – for attaching the mounting bracket to the wall/junction box
- (2) 6-32 X 1", - for attaching the adapter plate to the mounting bracket
- (2) 6-32 X 1/2 - for attaching the adapter plate to the mounting bracket
- Set of wall anchors and screws (V729DC and VC729P only)
- Camera base to mounting bracket grounding wire and nut

Overview


Requirements

- Ensure the unit is properly grounded.
- We recommend installing the V729 and on a weatherproof electrical box, but they can be mounted directly onto a wall with the included wall anchors and screws.

Mount the ADC-V729

Mounting recommendations


Note: For optimal PIR motion detection performance, it is recommended to install the ADC-V729 at a height of eight feet with the camera pointed downwards at a 30° angle.

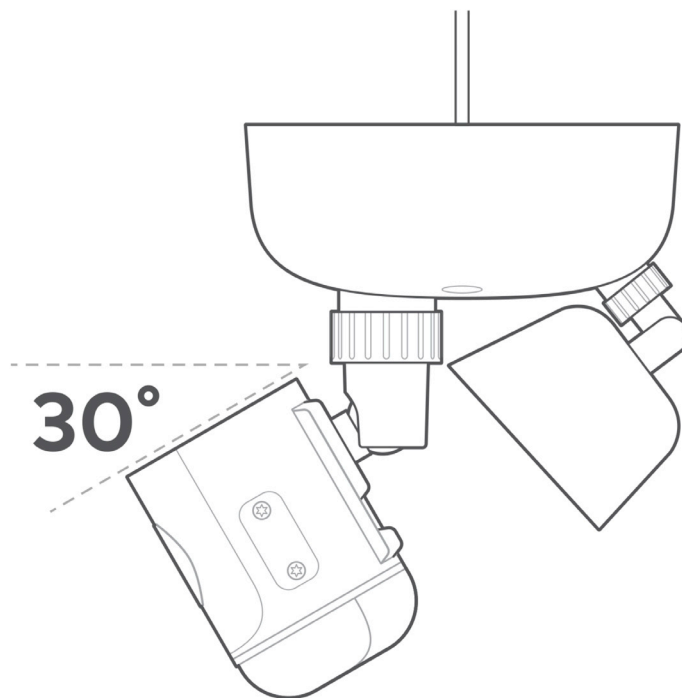

When to use the adapter plate:


If installing on a junction box where the only screw location is overlapping with mounting plate screws, use the adapter plate.

Note: This should be a rare situation. Use just the mounting bracket in all other cases.

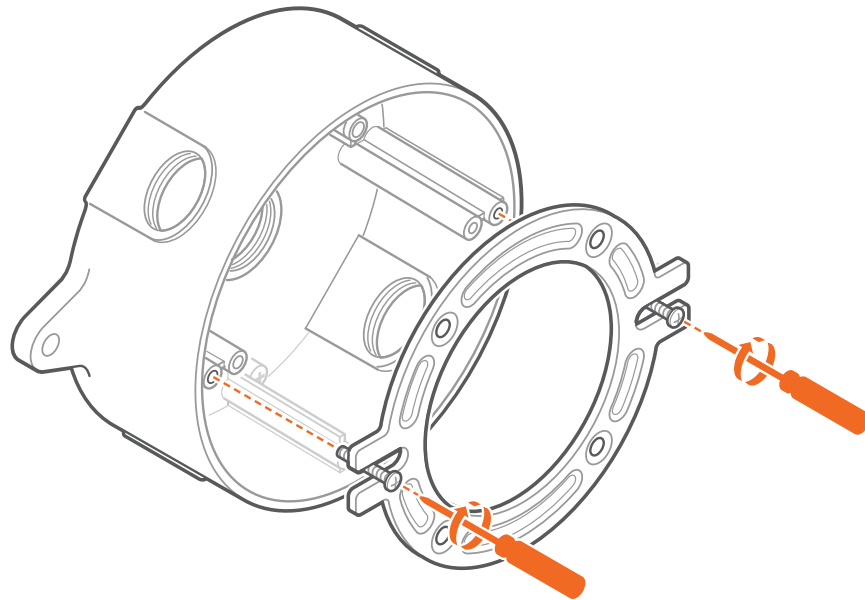

To install on the ceiling:


With the ball joint exposed to the front, flip the camera and lights 180°. The adapter should be installed with the camera in front of the floodlights with the arrow on the back pointing towards the wall.

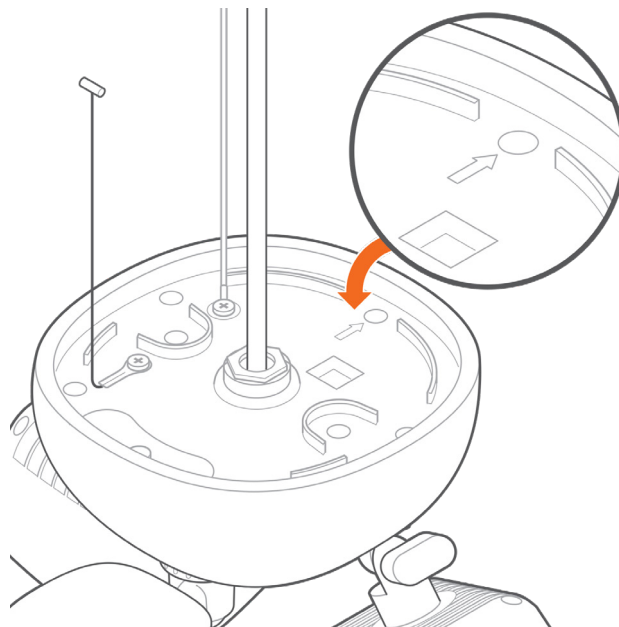

To Install using the mounting bracket:


Note: This is the most common installation type.

1. Screw the mounting bracket into the junction box using the appropriate set of screws. Ensure the mounting bracket is in the proper orientation.
 - If installing the camera on the wall, the hook should face the floor.
 - If installing the camera on an eave, the hook should face the wall.
2. Ensure the mounting bracket is secure to the wall.

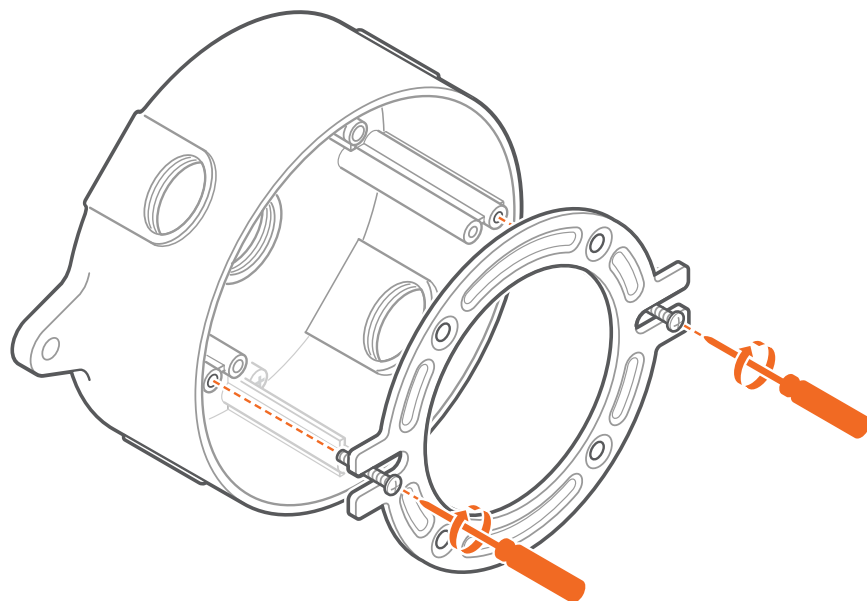


To install using the adapter plate:

1. Screw the metal bracket to the junction box using the appropriate set of screws via the long edge. Be sure to align it with the flat side facing the junction box.

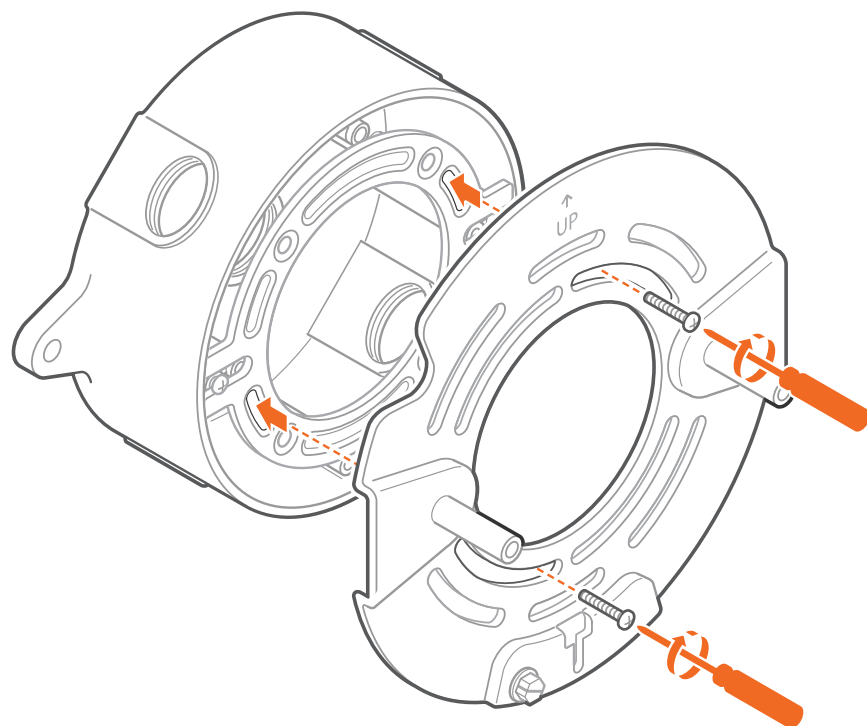

2. Screw the mounting bracket to the adapter plate using the holes in the mounting bracket circle.

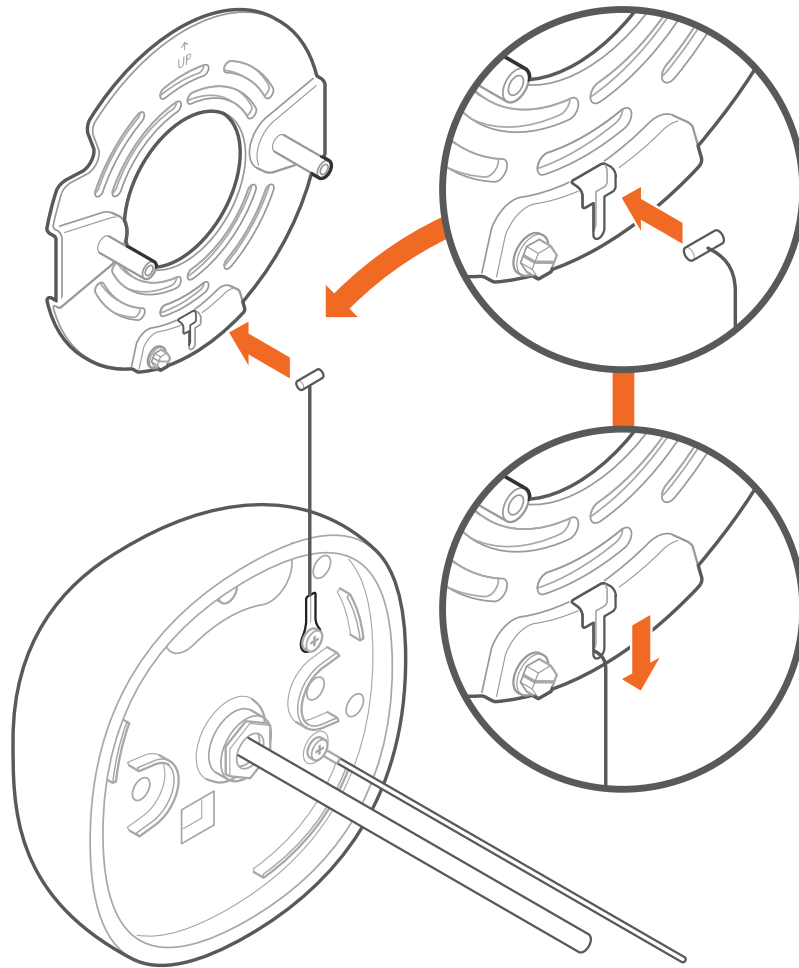


To hang the camera and prepare for wiring:

1. Put the T hook wire into the hole on the bottom of the mounting bracket to allow the fixture to hang from the mounting bracket.
2. Ensure the fixture is secure before releasing it.
3. Pull the cables through the center hole to prepare for wiring


Wire, mount, and power the ADC-V729

Caution: For secure positioning, confirm that all knobs and collars are firmly tightened. The lights and camera should not be left loose and should not allow for any motion when the camera is mounted.

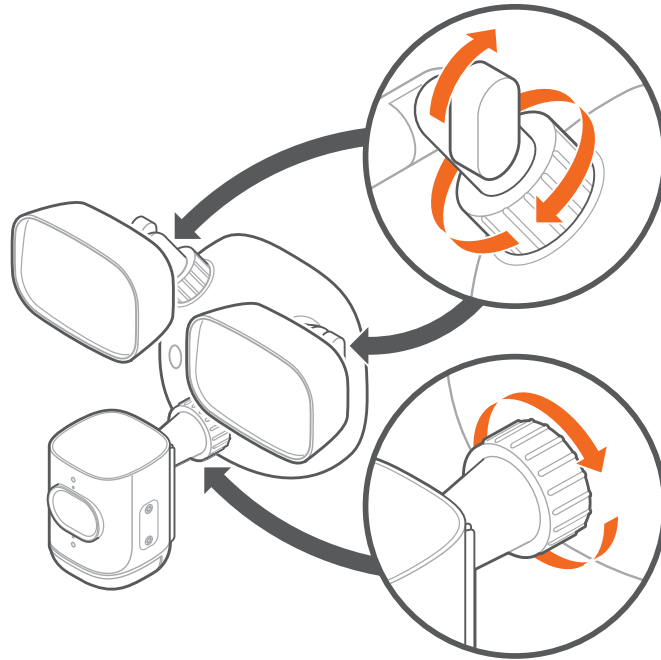

To wire the ADC-V729:

1. Connect the camera to the power adapter.
2. Connect the camera base to the power adapter and run wires as desired.

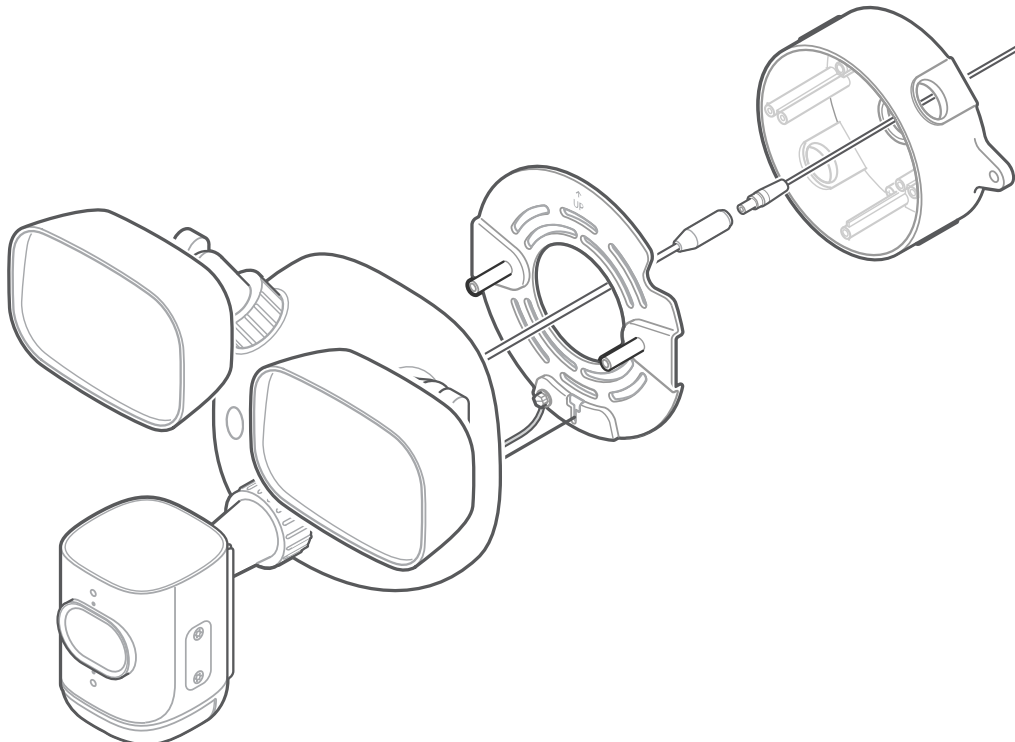

To mount the ADC-V729:

1. Push the wires back into the Connection box.
2. Disconnect the hook and align it along the bottom of the ADC-V729, or place the wires in the junction box.
3. Align two holes on the back of the floodlight base with the metal poles.
4. Screw in the unit using the included black screws.
5. Insert the weatherproof caps.

To power the ADC-V729:

1. Plug the adapter into an outlet. We recommend using an outlet that is not controlled by a light switch as turning the switch off will turn off power to the floodlight camera
2. The camera's LED should light up red after a few seconds. Wait for the camera's LED to start blinking white before proceeding.

Installation

AP Mode (recommended)

1. Once powered up, the camera's LED will begin to blink white. If the LED is not white after two minutes, press and hold the WPS/Reset button and release when the LED begins to blink white (about 6 seconds).
2. On an Internet-enabled device, connect to the Wi-Fi network ADC-V729 (XX:XX:XX) where XX:XX:XX is the last six characters of the ADC-V729's MAC address, which is located on the camera or on the packaging.
3. On the same device, open a web browser and enter 192.168.1.1 in the URL field. Follow the on-screen instructions to add the ADC-V729 to the Wi-Fi network. The LED will briefly turn red before blinking green. The LED will be solid green when the connection is complete.
4. Add the device to the account by either selecting the account in the Partner MobileTech app or by using a web browser and entering the following web address: www.alarm.com/addcamera (you will need the customer username and password).
5. Select the camera from the video device list or enter its MAC address to begin adding the camera. The MAC address is located on the camera or on the packaging.




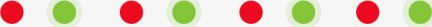



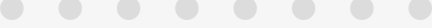
Follow the on-screen instructions to finish adding the camera.

Using WPS (alternate)

1. Once powered up, the camera's LED will begin to blink white. Press and hold the WPS/Reset button and release when the LED begins to blink blue (about 3 seconds).
2. Activate WPS mode on the router. The camera will begin to connect to the Wi-Fi network. The LED will be solid green when the connection is complete.
3. Add the device to the customer account by either selecting the account in the Partner MobileTech app or by using a web browser and entering the following web address: www.alarm.com/addcamera (you will need the customer username and password).
4. Select the camera from the video device list or enter its MAC address to begin adding the camera. The MAC address is located on the camera or on the packaging.

Follow the on-screen instructions to finish adding the camera.

LED Reference Guide

LED pattern	Description
Off 	Power off
Solid green 	Connected to Alarm.com
Blinking green 	Local network connection
Blinking red and green 	Reverting to factory default settings
Blinking red 	Power on, camera booting
Solid red 	No local or Internet connection
Blinking blue 	WPS mode
Blinking white 	Wi-Fi Access Point mode

Troubleshooting

1. If you have issues connecting the camera to the account, power cycle the camera and try again.
2. If issues persist, reset the camera to factory defaults. Press and hold the WPS/Reset button until the LED is flashing green and red (about 15 seconds), then release the button. The camera will reboot to factory default.

Important If the camera was previously installed on a different Alarm.com account, it will need to be deleted before it can be installed again.

Notices

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause unwanted behaviors.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The VC729P is only to be connected to PoE networks without routing to outside plants.
- FCC ID: YL6-1438852R

ICES

- This Class B digital apparatus complies with Canadian ICES-003.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - o This device may not cause interference.
 - o This device must accept any interference, including interference that may cause undesired operation of the device.
- This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the equipment and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. Please contact intsupport@alarm.com for more information on Canadian RF exposure compliance.
- Les appareils numériques de classe B sont conformes à la norme canadienne ICES-003.
- Cet appareil contient des émetteurs ou récepteurs exempts de licence qui sont conformes aux RSS exempts de licence du ministère de l'Innovation, des Sciences et du Développement économique Canada. Le fonctionnement de l'équipement dépend de deux conditions :
 - a. Cet appareil ne doit pas provoquer d'interférence.
 - b. Cet appareil doit accepter toute interférence, y compris celles qui pourraient provoquer un fonctionnement indésirable de l'appareil.
- o Cet appareil est conforme aux limites d'exposition aux radiofréquences établies par la FCC et l'ISED pour un environnement non contrôlé. Cet appareil doit être installé et utilisé à une distance minimale de 20 centimètres entre l'appareil et votre corps. Cet appareil et son ou ses antennes ne doivent pas être situés ou fonctionner en conjonction avec une autre antenne ou un autre émetteur. Veuillez communiquer avec intsupport@alarm.com pour obtenir plus d'information sur la conformité aux exigences canadiennes en matière d'exposition aux radiofréquences.
- o IC: 9111A-1438852R